



1885651
O-Sullivan Nightstand
Parts List

A.	Top Panel	1 pc
B.	Bottom Assembly	1 pc
C.	Left Side Panel	1 pc
D.	Right Side Panel	1 pc
E.	Stretcher	1 pc
F.	Door	1 pc
G.	Back Panel	1 pc
H.	Adjustable Shelf	1 pc
I.	Left Side Panel of Drawer	1 pc
J.	Right Side Panel of Drawer	1 pc
K.	Front Panel of Drawer	1 pc
L.	Back Panel of Drawer	1 pc
M.	Bottom Panel of Drawer	1 pc
N.	Handles	2 pcs
O.	Shelf Pins	4 pcs
P.	Connecting Bolts	10 pcs
Q.	Eccentric Cams	10 pcs
R.	Phillips Head Bolts	20 pcs
S.	Long Phillips Head Bolt	1 pc
T.	Short Phillips Head Bolt	1 pc
U.	Pan Head Screws	22 pcs
V.	Flat Head Screws	6 pcs
W.	Drawer Stoppers	2 pcs
X.	Phillips Head Screwdriver	1 pc
Y.	Flat Head Screwdriver	1 pc


* Please make sure that you have all the parts indicated above before you begin assembly of this item.

1885651


O-Sullivan Nightstand

- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.


Hardware Illustrations




O. Shelf Pin



P. Connecting Bolt

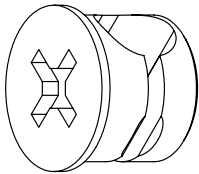


Q. Eccentric Cam




R. Plastic Cap




S. Long Phillips Head Bolt



T. Short Phillips Head Bolt



U. Pan Head Screw



V. Flat Head Screw



W. Drawer Stopper

1885651

O-Sullivan Nightstand

Attach Top Panel, Left & Right Side Panels and Bottom Assembly

Parts required

A. Top Panel	1 pc	P. Connecting Bolts	10 pcs
B. Bottom Assembly	1 pc	Q. Eccentric Cams	10 pcs
C. Left Side Panel	1 pc	R. Plastic Caps	10 pcs
D. Right Side Panel	1 pc	X. Phillips Head Screwdriver	1 pc
E. Stretcher	1 pc	Y. Flat Head Screwdriver	1 pc

1. **Attach Connecting Bolts (P)** Align the exposed threads of the Connecting Bolts (P) with the pre-threaded holes in Top Panel (A) & Bottom Assembly (B). Tighten by turning in a clockwise direction using Flat Head Screwdriver (Y). See illustration #1.
2. **Attach Left & Right Side Panels (C, D)** Insert the Connecting Bolts (P) in the Bottom Assembly (B) into the pre-drilled holes in the Left Side Panel (C) so that dowel of Left Side Panel (C) inserts into the pre-drilled hole in the Bottom Assembly (B). Make sure the magnet assembly is on the top of Left Side Panel (C). Insert the dowel of Stretcher (E) into the pre-drilled holes in the Left Side Panel (C). Repeat above step to attach Right Side Panel (D). Insert the Eccentric Cams (Q) into the pre-drilled holes of Left & Right Side Panels (C, D). Make sure the groove in the Eccentric Cams (Q) faces out and the arrow points towards the Connecting Bolts (P). Use the Phillips Head Screwdriver (X) to adjust the Eccentric Cams (Q) and to lock the inserted Connecting Bolts (P) in place by turning in a clockwise direction. See illustration #1.
3. **Attach Top Panel (A)** Insert the Connecting Bolts (P) in the Top Panel (A) into the pre-drilled holes in the top end of Left & Right Side Panels (C, D) so that dowels of Left & Right Side Panels (C, D) insert into the pre-drilled holes in the Top Panel (A). Insert the Eccentric Cams (Q) into the pre-drilled holes of Left & Right Side Panels (C, D). Make sure the groove in the Eccentric Cams (Q) faces out and the arrow points towards the Connecting Bolts (P). Use the Phillips Head Screwdriver (X) to adjust the Eccentric Cams (Q) and to lock the inserted Connecting Bolts (P) in place by turning in a clockwise direction. Cover all the Eccentric Cams (Q) using Plastic Caps (R). See illustration #1.

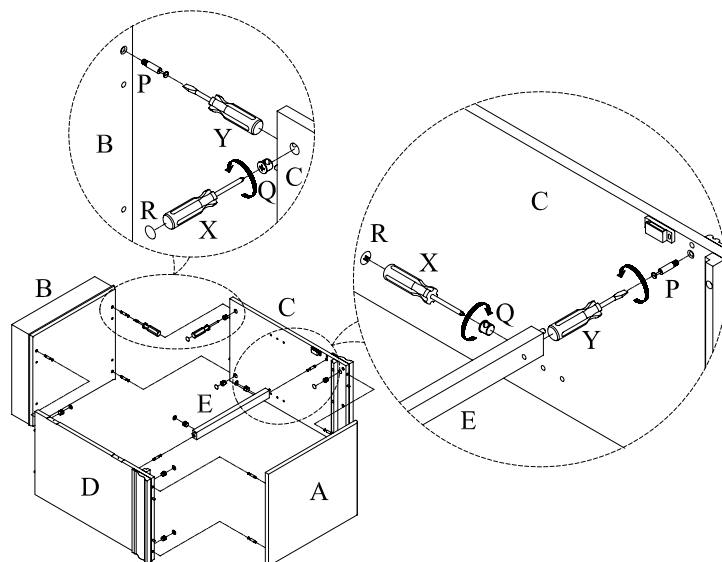


Illustration #1



1885651

O-Sullivan Nightstand

Attach Door & Back Panel

Parts required

A.	Top Panel	1 pc	N.	Handle	1 pc
B.	Bottom Assembly	1 pc	T.	Short Phillips Head Bolt	1 pc
C.	Left Side Panel	1 pc	U.	Pan Head Screws	14 pcs
D.	Right Side Panel	1 pc	V.	Flat Head Screws	4 pcs
F.	Door	1 pc	X.	Phillips Head Screwdriver	1 pc
G.	Back Panel	1 pc			

4. **Attach Back Panel (G)** Align the pre-drilled holes in the Back Panel (G) with the pre-drilled holes in the Top Panel (A), Left & Right Panels (C, D) and Bottom Assembly (B). Secure with Pan Head Screws (U) using Phillips Head Screwdriver (X). See illustration #2.
5. **Attach Door (F)** Align the pre-drilled holes in the hinges of Door (F) with the pre-drilled holes in the Right Side Panel (D). Secure with Flat Head Screws (V) using Phillips Head Screwdriver (X). See illustration #2.
6. **Attach Handle (N)** Align the pre-threaded hole in the Handle (N) with the pre-drilled hole in the Door (F). Insert the Short Phillips Head Bolt (T) through the pre-drilled hole in the Door (F) into the Handle (N). Secure with Phillips Head Screwdriver (X). See illustration #2.

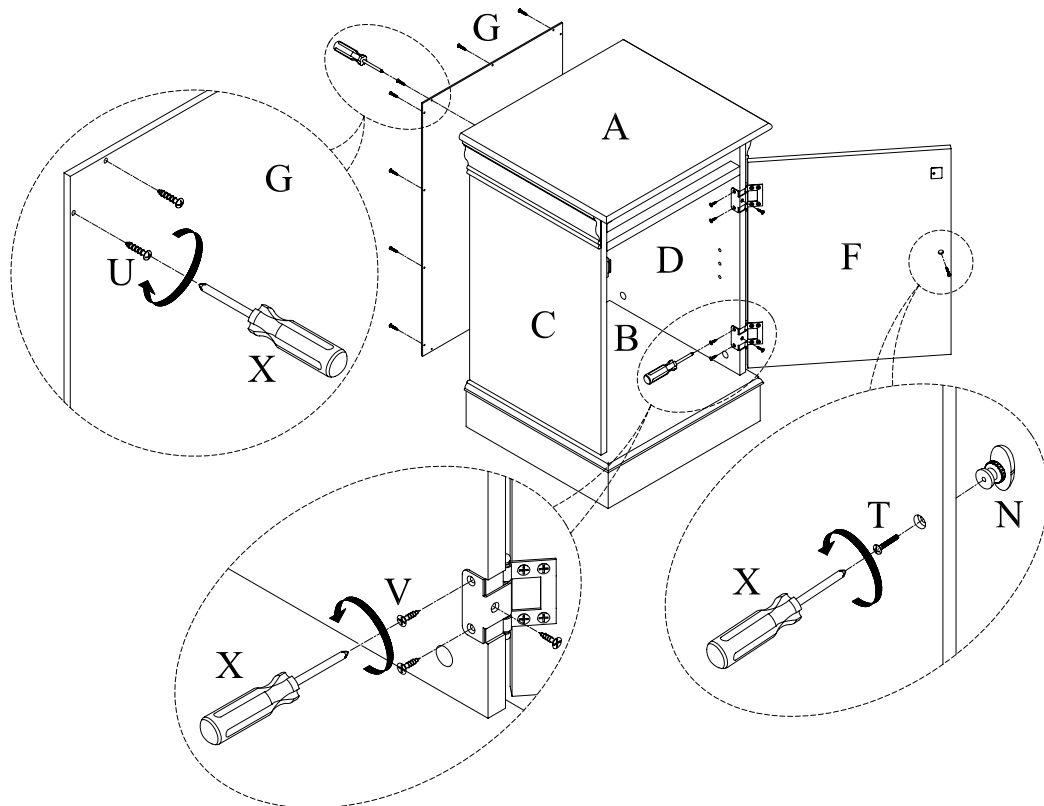


Illustration #2

1885651

O-Sullivan Nightstand

Attach Drawer & Adjustable Shelf

Parts required

C.	Left Side Panel	1 pc	M.	Bottom Panel of Drawer	1 pc
D.	Right Side Panel	1 pc	N.	Handle	1 pc
H.	Adjustable Shelf	1 pc	O.	Shelf Pins	4 pcs
I.	Left Side Panel of Drawer	1 pc	S.	Long Phillips Head Bolt	1 pc
J.	Right Side Panel of Drawer	1 pc	U.	Pan Head Screws	8 pcs
K.	Front Panel of Drawer	1 pc	W.	Drawer Stoppers	2 pcs
L.	Back Panel of Drawer	1 pc	X.	Phillips Head Screwdriver	1 pc

7. **Assemble Drawer** Align the pre-drilled holes in Left Side Panel of Drawer (I) with the pre-drilled holes in the Front & Back Panels of Drawer (K, L). **Note: Grooves of the drawer panels should face inward and meet.** Insert Bottom Panel of Drawer (M) into the grooves of Front, Left Side & Back Panels of Drawer (K, I,). Secure with Pan Head Screws (U) using Phillips Head Screwdriver (X). Align the pre-drilled holes in the Right Side Panel of Drawer (J) with the pre-drilled holes in the Front & Back Panels of Drawer (K, L). Secure with Pan Head Screws (U) using Phillips Head Screwdriver (X). Align the pre-threaded hole of Handle (N) with the pre-drilled hole in the Front Panel of Drawer (K). Secure with Long Phillips Head Bolt (S) using Phillips Head Screwdriver (X). See Illustration #3.
8. **Attach Drawer Stoppers (W)** Insert a part of drawer in place and insert the Drawer Stoppers (W) into the pre-drilled holes in the Left & Right Side Panels of Drawer (I, J). See Illustration #3.
9. **Attach Adjustable Shelf (H)** Insert the Shelf Pins (O) into the desired pre-drilled holes in the Left & Right Side Panels (C, D). Put the Adjustable Shelf (H) on the Shelf Pins (O). See Illustration #3.

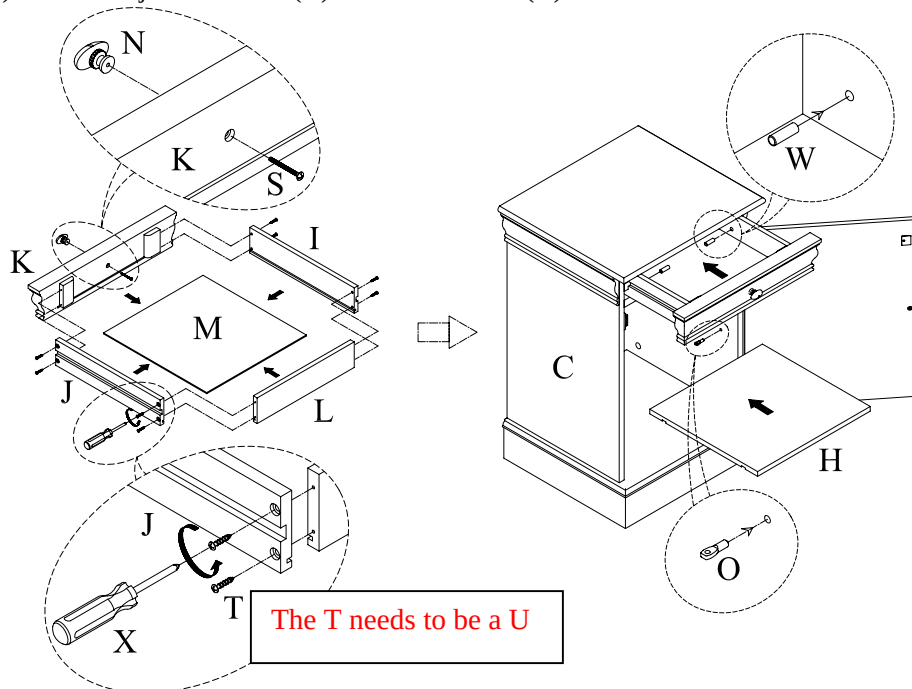


Illustration #3